


# Eco-dec® Wooden Floor Fitting Instructions



1 Locate Eco-dec® in the corner to which it is going to be finally positioned and mark lines around the outer edge.



2 Remove the floor within the marked area to a depth of 18mm to accept Eco-dec®. **Ensure the joists provide a secure and flat surface for the Eco-dec®.** It may be necessary to use packing on the joists to ensure the Eco-dec® is level.

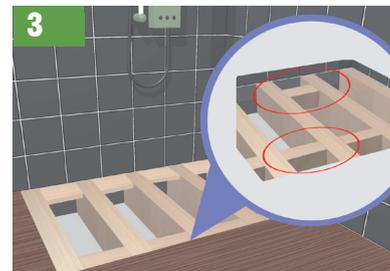

3 Use noggins to support all edges of the Eco-dec® & around the waste position for further support as shown.

**NOTE:** If the floorboards are 18mm thick you would need 6mm plywood to make the 24mm thick Eco-dec® and floor absolutely level in order to apply your floor covering.


**Eco-dec 900x900 is only 22mm thick.**



4 Connect the trap body to your outlet pipework, position between joists and centrally beneath the hole in the Eco-dec®. Ensure the trap is fully supported underneath.




5 Place the Eco-dec® in the correct position.

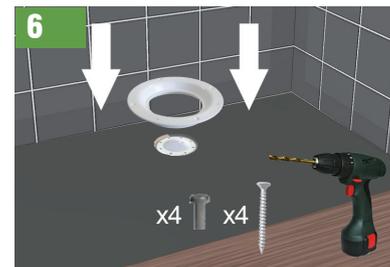


6 Attach flange to the trap body using the 4 bolts provided, ensuring that the rubber seal is in place. Secure flange to Eco-dec®, there are 4 countersunk indentations in the flange to assist with this.



7 Also ensure that flange on the trap body is level with, or slightly below the Eco-dec® once in its correct position and that the rubber seal is in place.

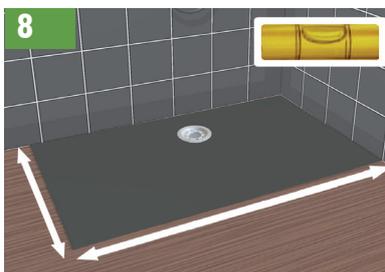

8 Ensure that the Eco-dec® is well supported and completely level.

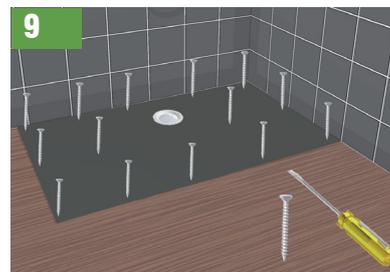


9 Use the longer screws provided to secure the Eco-dec® to the floor joists. **DO NOT PRE-DRILL.** Ensure Eco-dec® is secured along all 4 edges & to all supporting joists where required to eliminate any movement. Use extra screws if required.

**TIP:** Fill the joint, using a resin car body filler or similar to form a strong bond between the Eco-dec® and the floor.



10 At this stage you will now be ready to bond into position the relevant coverings and floor coverings.

**NOTE:** Bond vinyl sheet flooring to the floor using a 2 part water resistant adhesive. All flooring should be installed in accordance with the manufacturers guidelines.

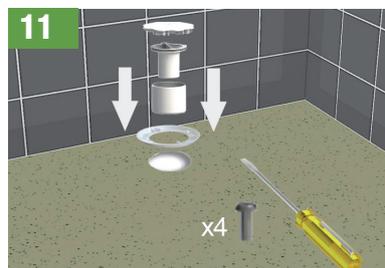

11 Once the floor covering is laid, screw into position the traps clamping ring using the bolts provided ensuring the inner cup and dip tube can still be removed. Fit the shower traps push on cover plate.

**You can now install your chosen shower enclosure.**

**Technical Helpline:**  
**0800 292 2110**

**NOTE:**

If fitting a pumped trap follow the above instructions with the exception of installation of the trap itself, Point 4 & 6.

The trap is a one part trap fed through from the top of the Eco-dec®.

Issue 3 NOV 2014