
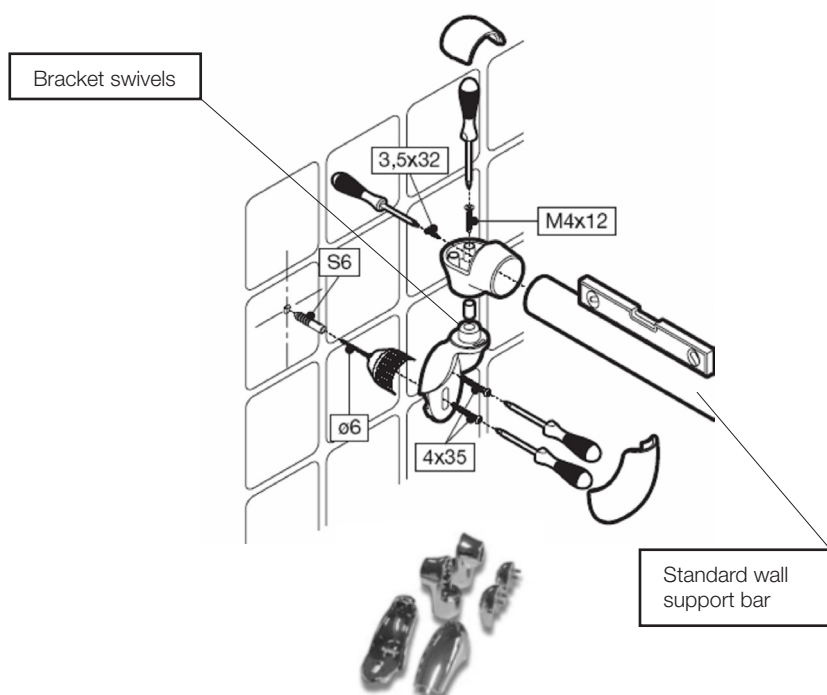


Glass Screen Assembly Instructions

GLASS SCREEN ASSEMBLY DETAILS

- Compensator allows 30mm adjustment for out of true walls
- Installs directly onto all Contour trays and tiled wetfloor areas
- Bottom seal included but fitting optional
- Chrome bottom fixing support foot included but fitting optional
- Wall support supplied as standard and can be cut to size as required
- Bolster section option for installing on a curved vinyl floor
- Not handed

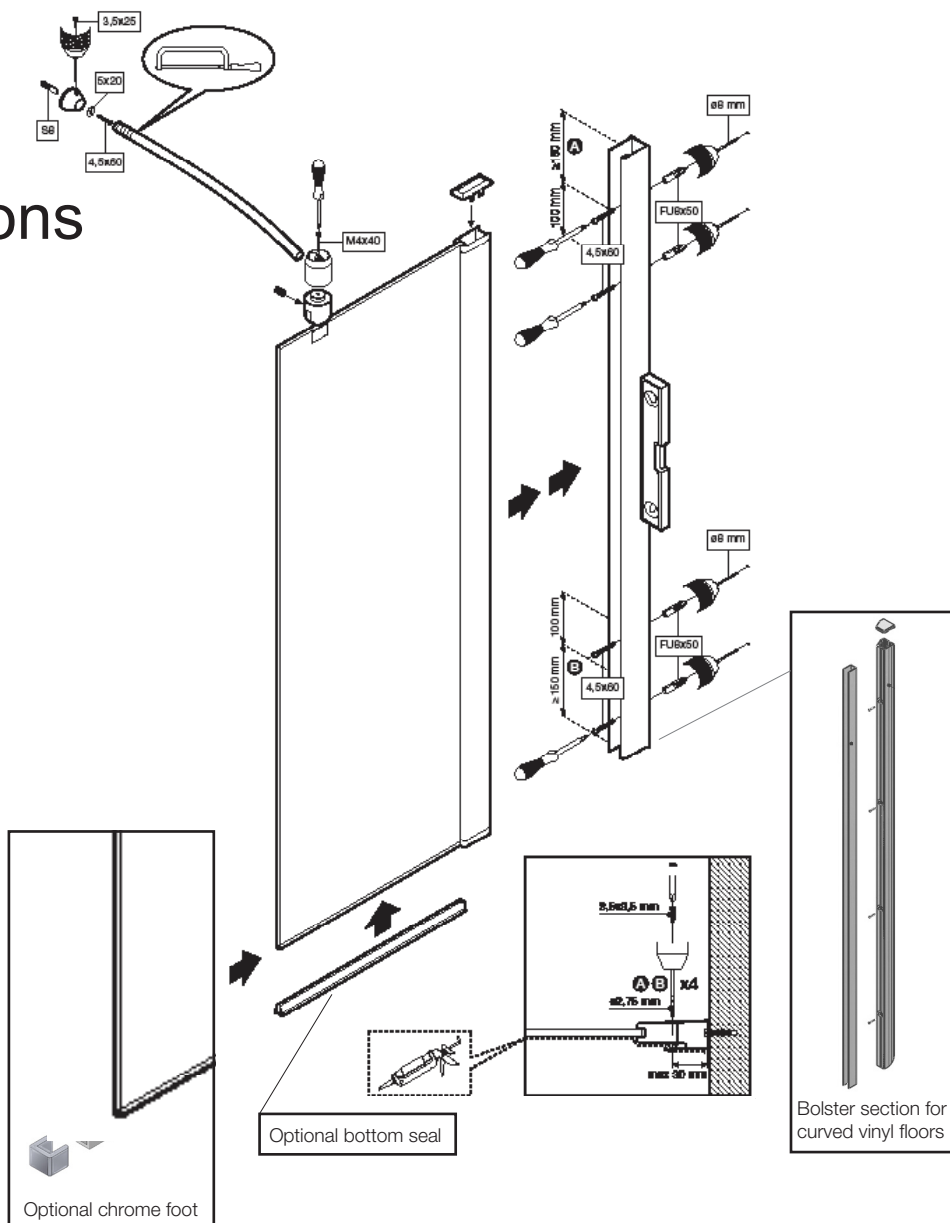

45° WALL BRACKET ASSEMBLY DETAILS

- 45° wall bracket available if you wish to add a return panel for a true walk-in shower feel
- Supplied as an optional extra
- Utilise with standard wall support bar supplied with each glass screen
- Bracket swivels for easy installation
- Not handed